



INSTALLATION

REFLECTIVE SMOKE SADDLESHIELDS 1186

FOR SOFTAIL

FITS ALL '00-UP SOFTTAIL MODELS (EX. DEUCE)

PARTS INCLUDED

- 1 Heat Shield, Left
- 1 Heat Shield, Right
- 1 Mounting Bracket, Front
- 2 Mounting Bracket, Rear
- 1 Hardware Kit, including:
 - 4 10-24 x 1/2" BSCS Fastener, Stainless
 - 4 10-24 High Crown Acorn Nut, Chrome
 - 4 #10 Flat Washer, Stainless
 - 4 #10 Split Lock Washers, Stainless
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

PLEASE NOTE

It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

CAUTION! CLEAN ONLY WITH WARM WATER AND A MILD, NON-ABRASIVE SOAP. SOME CLEANING PRODUCTS CONTAIN HARSH CHEMICALS THAT CAN SEVERELY DAMAGE PRODUCT AND VOID WARRANTY.


TOOLS SUGGESTED

Torx-driver (T40), Allen wrench (1/8"), combination wrench (3/8"), socket (1/2") and ratchet.

ATTENTION! A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all steps in the procedure; consult a trained technician.

PROCEDURE

STEP 1 Loosely assemble the right and left heat shields to the front mounting bracket. Be sure that the washer, lock washer, and the acorn nut are seated in the depression on each heat shield. See PIC.1 and PIC.2.

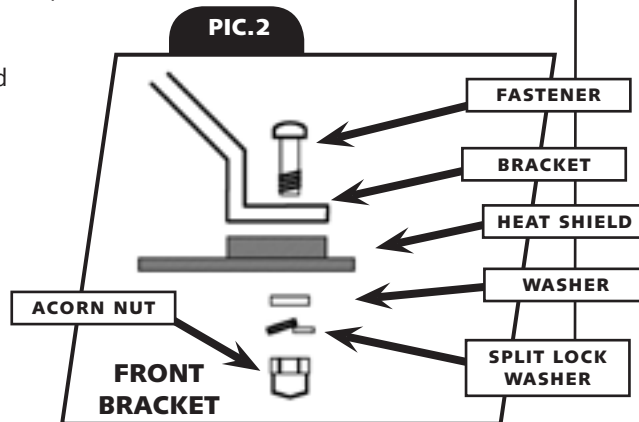

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



STEP 2 Loosely secure a rear mounting bracket on each of the heat shields. Be sure the acorn nut faces downward. The bent angle of the mounting brackets should also face downward. See [PIC.3](#).

STEP 3 Remove the seat from the bike; refer to your factory service manual for specific instructions.

STEP 4 Locate the three fasteners shown in [PIC.4](#). The saddle shields will be mounted using the stock hardware. Remove the front fastener; loosen the two rear fasteners but do not remove.

STEP 5 Place the saddle shield assembly over the forward mounting point; re-install the stock fastener, but do not tighten at this point. See [PIC.5](#).

STEP 6 Remove the left rear fastener; slide the left rear bracket between the oil tank and the oil tank support. Re-install the stock fastener but do not tighten. Repeat for the opposite side. See [PIC.5](#).



STEP 7 Center the saddle shield assembly so that there is an even gap between the heat shields and the fuel tank. Tighten the fasteners on the front mounting bracket, then tighten the forward stock fastener. Be sure the saddle shield assembly remains centered.

ATTENTION! BE SURE THERE IS ADEQUATE CLEARANCE BETWEEN THE SADDLE SHIELDS AND FUEL TANK.

STEP 8 Tighten the fasteners on the rear brackets, then tighten the rear stock fasteners.

STEP 9 Replace the seat on the bike.

Kuryakyn

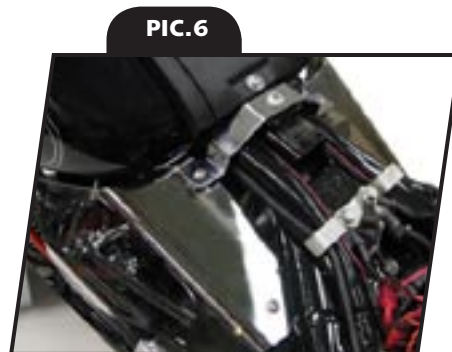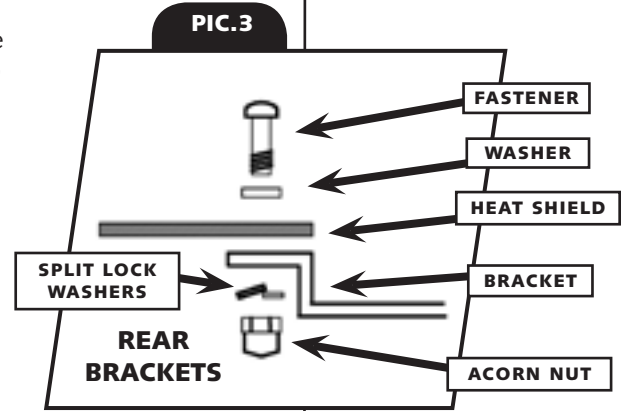

Ride On!