



INSTALLATION



REFLECTIVE SMOKE SADDLE SHIELDS 1196

FITS: '08-UP TOURING MODELS

PARTS INCLUDED

- 1 Left Saddle Shield
- 1 Right Saddle Shield
- 2 5/16 Wide Flat Washer
- 2 Polycarbonate Spacers
- 2 Alcohol Prep Pads
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Torx drivers, phillips screwdriver and ft.-lb torque wrench.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

STEP 2 Remove the seat from the motorcycle by removing the fastener at the back of the seat shown in PIC.1; retain the screw as it will be used to reinstall the seat.

STEP 3 Remove the two rear fuel tank bolts shown in PIC.2, save the bolts, as they will be re-used.

PIC.1



CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



STEP 4 Remove any grease or debris from the installation area (shown in [PIC.3](#)) with soapy water and a clean rag.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Küryakyn WILL NOT warranty any parts lost due to improper installation.

STEP 5 Test fit the Saddle Shield to check for proper clearance.

STEP 6 Remove the Saddle Shield and clean the area shown in [PIC.3](#) with the included alcohol-cleaning pad; allow the area to dry completely.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 7 Using the back of your fingernail, rub the backing of the adhesive pad to activate the catalyst.

STEP 8 Remove the adhesive backing from the adhesive strips on one of the Saddle Shields.

STEP 9 Reinstall the Saddle Shield, holding it at a slight angle to prevent the adhesive from sticking, and install the gas tank bolt that was removed in [STEP 3](#) with an included washer and the spacer underneath the Saddle Shield as shown in [PIC.4](#). Do not tighten at this point.

STEP 10 Making sure that there is proper clearance between the Saddle Shield and the gas tank and side panel, press the Saddle Shield into place (See [PIC.5](#)) for one (1) minute to ensure proper adhesion. Full bond strength will occur within 24 hours.

STEP 11 Repeat [STEP 4](#) through [STEP 10](#) for the other side

STEP 12 Tighten the gas tank bolts; torque them to 15-20 ft-lbs.

STEP 13 Reinstall the seat and secure using the fastener that was removed in [STEP 2](#).

STEP 14 Ensure proper clearance and operation before riding the motorcycle.


CARE AND MAINTENANCE

STEP 1 Clean the saddle shields with warm water and, a mild non-abrasive soap and a clean, soft cloth.

CAUTION! Some cleaning products contain harsh chemicals that can severely damage product and void warranty.

Ride On!


PIC.2

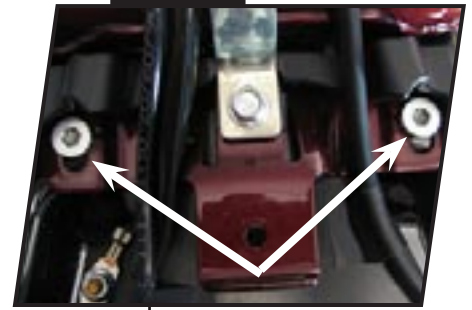

PIC.3



PIC.4

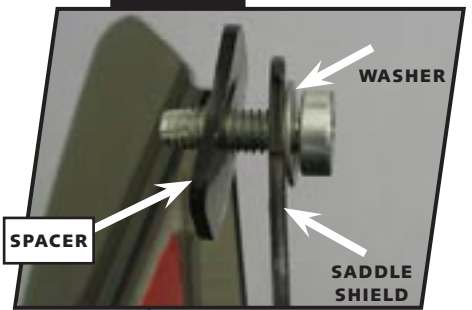

PIC.5

