



# INSTALLATION



## FLAMED SADDLEBAG LATCH ACCENTS 1595

**FITS: '93-UP DRESSERS, ROAD KINGS, ROAD GLIDES, AND STREET GLIDES WITH HARD BAGS**

### PARTS INCLUDED

- 1 Right Latch Cover
- 1 Left Latch Cover
- 2 Skull Emblem
- 2 Maltese Emblem
- 2 Widow Emblem
- 2 Alcohol Pads
- 1 Hardware Kit including:
  - 6 8-32 x 1/4" Button Head Cap Screw (BHCS)
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

### THANK YOU FOR CHOOSING KÜRYAKYN!

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**WARNING!** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**CAUTION!** This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

**ATTENTION!** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

### TOOLS SUGGESTED

Set of hex wrenches, set of Torx drivers, and set of combination wrenches.

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

### PROCEDURE

**STEP 1** Park the motorcycle on a hard, level surface & turn off the ignition.

### RIGHT SIDE PROCEDURE

**STEP 2** Open the saddlebag lid, and remove the two Torx head screws that secure the tether strap to the lid shown in PIC.1. Set these screws aside, they will be re-used.



### CUSTOMER SERVICE

877.370.3604 (toll free)

### INSTALLATION QUESTIONS

techsupport@kuryakyn.com  
or call 715.247.2983

### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

### ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



**CAUTION!** Avoid damage to the motorcycle. Protect painted surfaces with a soft cloth or blanket.

**STEP 3** Note the orientation of the lock and remove the screws that secure it to the latch assembly, remove the lock and screws, set them aside; they will be re-installed later. (See [PIC.2](#).)

**STEP 4** Remove the nut shown in [PIC.2](#), this will not be used again.

**STEP 5** Close the lid and hold onto the faceplate while removing the two Torx screws shown in [PIC.3](#). These screws will not be used again.

**STEP 6** Place the right (left) latch cover on the latch assembly, lining up the holes; install two of the included 8-32 x 1/4" BHCS screws through the holes on the outside of the latch cover, do not fully tighten yet. (See [PIC.4](#).)

**STEP 7** Open the lid and install a 8-32 x 1/4" BHCS screw from the hardware kit in the front hole (shown in [PIC.2](#).) do not fully tighten the screw at this point.

**STEP 8** Re-install the lock, making sure to install it in the correct orientation. Secure with the two screws that were removed in STEP 3.

**STEP 9** Secure the tether strap to the lid, using the two screws that were removed in STEP 2.

**STEP 10** Fully tighten the screws from STEP 6, STEP 7, and STEP 8.

**STEP 11** Check to make sure that the lid, latch and lock all function properly.

**STEP 12** Choose one of the styles of the included inserts.

**ATTENTION!** Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Kuryakyn WILL NOT warranty any parts lost due to improper installation.

**ATTENTION!** The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

**STEP 13** Clean the area shown in [PIC.5](#) with one of the included alcohol pads and allow the area to dry completely.

**STEP 14** Rub the backing of the adhesive pad, to activate the catalyst before removing the backing and applying the emblem.


**STEP 15** Place the emblem on the latch accent, making sure that the holes in the back of the emblem fit onto the placement pins, (see [PIC.5](#).)

**STEP 16** Hold in place for one (1) minute to ensure proper adhesion. Full bond strength will occur within 24 hours.

**STEP 17** Repeat STEP 2 through STEP 16 for the left side.

**Kuryakyn**

**PIC.2**

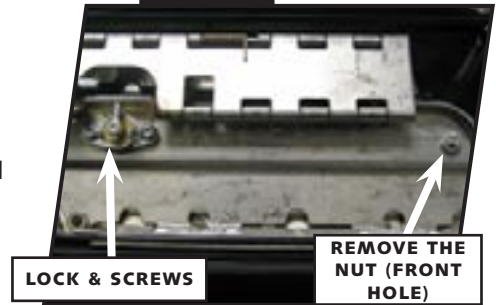


**PIC.3**



**PIC.4**



**PIC.5**

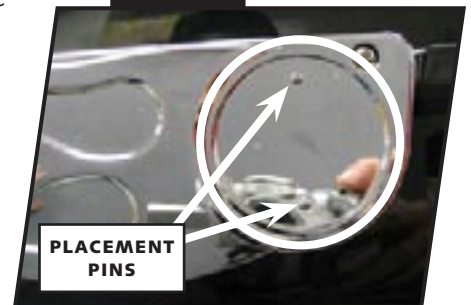

**PAGE**

**2**

*Ride On!*

**SADDLEBAG LATCH ACCENTS**

**INSTALLATION**